Eager Beaver Trailers Air Brake Chamber Application List

Description	PN	Application	Remarks *
Type 20	2059400	10 Ton	Pre ABS; Replaces type 16
Type 24	2059401	12 Ton	Pre ABS
Type 30	2058070	20 Ton and above	Pre ABS
Type 20/24	2062026	10 & 12 Ton	ABS with Spring Brake
Type 24/24	2062329	12 Ton (Before 9/2011)	ABS with Spring Brake
Type 24/30	451107	12 Ton (Special)	ABS with Spring Brake
Type 30/30	2059596	20-25 Ton Tag & 25GLB	ABS with Spring Brake (4" Rod Length) **
Type 30/30	2059597	35 Ton & UP	ABS with Spring Brake (5.5" Rod Length) **


10 Ton - Mount Chambers in "B" Holes (Closest to axle beam), set Slacks @ 5" Hole

Beginning in January 1998 ABS & Spring Brakes on at least one Axle Required by Law Eager Beaver has always put Spring Brake Chambers on ALL AXLES.


Examples of the two types of brake chambers shown below.

Note that the threaded actuating rods may NOT come with clevis end and pin.

Also note that the Spring Brake Chamber (left side example) is shown with caging bolt in place.

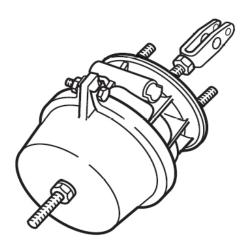

Spring Brake Type Air Chamber (Type 20/24, 24/24, and 30/30)

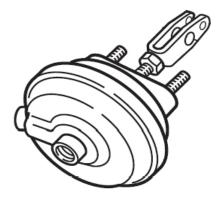

Single Diaphragm Type Air Chamber (Type 20, 24, and 30)

¹² Ton - Mount Brake Chambers in "A" Holes (Furthest away from axle beam), set Slacks @ 6" Hole

^{*} Trailers manufactured before January 1998 were not required to have ABS. Most trailers manufactured before January 1998 had single diaphragm (non-Spring Brake) air brake chambers Spring Brake Chambers were available as an option so customer must verify Type.

^{**} Measure rod length with brake chamber caged and Clevis removed